



# RolloPort S4

## Accessories



**4385**  
1-channel manual transmitter 433 MHz  
incl. bracket

---



**4385-4T**  
4-channel manual transmitter 433 MHz  
incl. bracket

---



**4360**  
2-channel micro manual transmitter 433 MHz

---



**4595**  
Key sensor with cylinder, flush-mounted,  
for opening the garage door manually from  
outside, lockable on both sides

---



**4596**  
Key sensor with cylinder, surface-mount-  
ed, for opening the garage door manually  
from outside, lockable on both sides

---



**4596-F**  
Radio key sensor with cylinder, surface-  
mounted, to operate the garage door drive  
by key, from outside, battery-operated

---



**4593**  
Key sensor without cylinder, flush-mount-  
ed (for profile cylinders with lockable set-  
ting 0° above, lockable on both sides)

---



**4594**  
Key sensor without cylinder, surface-mounted  
(for profile cylinders with lockable setting  
0° above, lockable on both sides)

---



**4594-F**  
Radio key sensor without cylinder, surface-  
mounted, to operate the garage door drive  
by key from outside, battery-operated

---



**4590**  
Internal sensor for opening the garage  
door

---



**4603**  
Standard code switch, code lock with number entry, consisting of a keypad and a control unit

---




**4603-F**  
Standard radio code switch, code lock with number entry

---



**4606-F**  
Comfort radio code switch, as 4603-F but with anti-vandal keypad

---

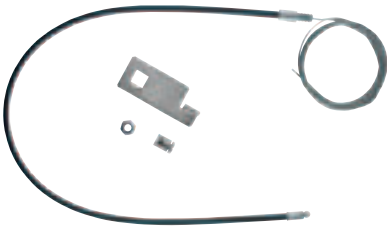

**4560-01**  
External release for swing doors, for manual opening from outside

---



**4560-02**  
External release for sectional doors, for manual opening from outside

---



**4560-03**  
Sectional door bracket

---



**4560-04**  
Centre suspension

---



**4591**  
Perforated bracket, length 770 mm

---